


How to check engine error codes

When **Pxxxx** / **Uxxxx** is shown

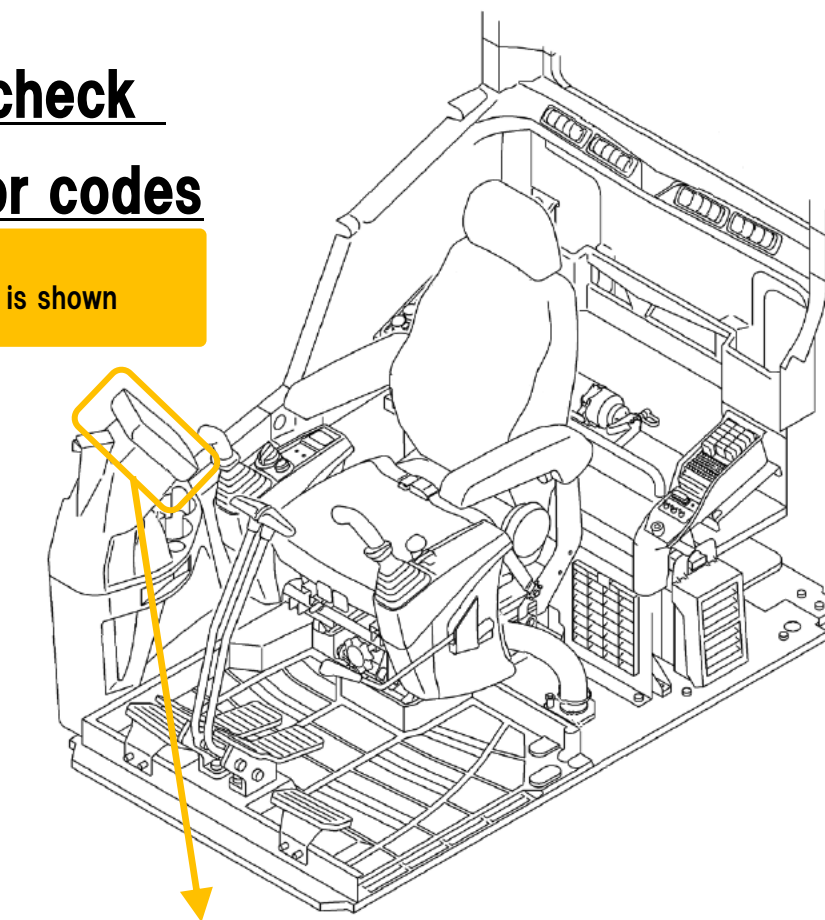

When engine error occurs

Please read **Pxxxx**, or **Uxxxx** error codes
on the monitor.

※Multiple error may occur. Please check all error codes.

P*****