


How to check engine error code

When **SPN/FMI** code is shown

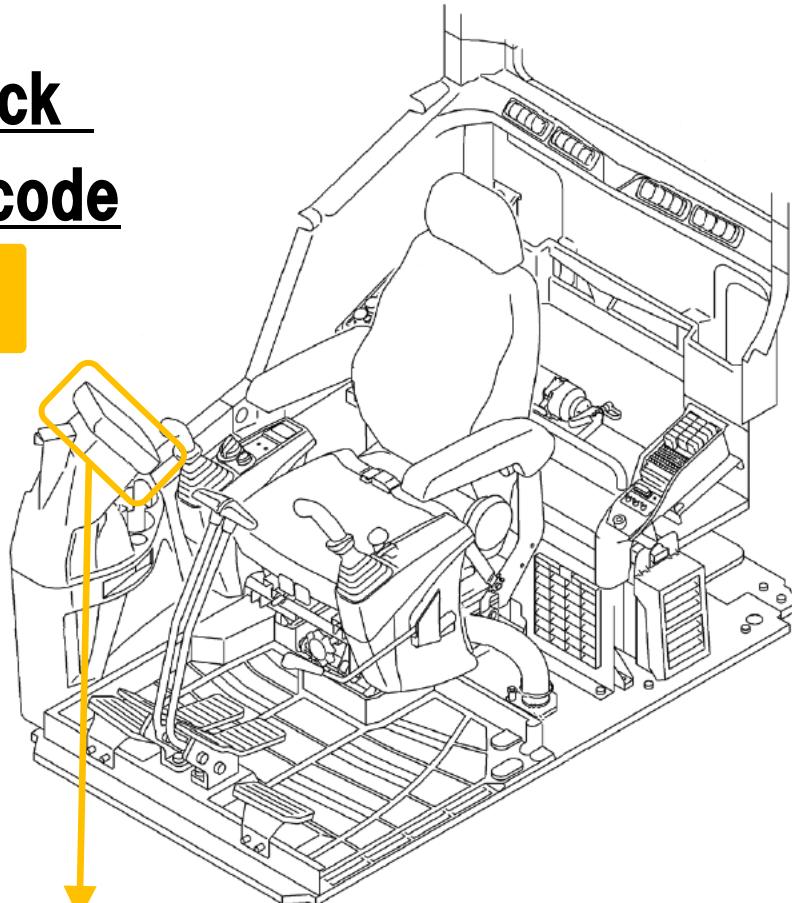

Engine error is occurring.

Please read **SPN/FMI** code

on the monitor.

※Multiple error may occur. Please check all error codes.

SPN 524287
FMI 19