


How to check

error code

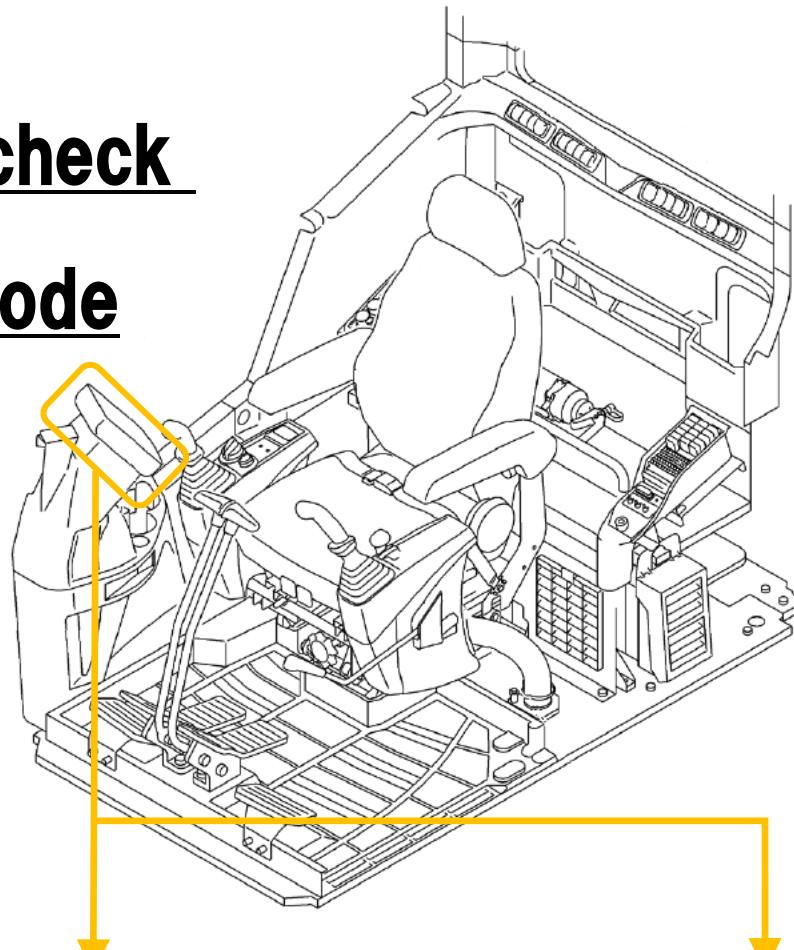

APC Monitor

When **Pxxxx/Uxxxx**

Or **SPN/FMI** is showing

Engine error is occurring.

Please go to **Engine** pages

When **Exx • Axx • Mxx**

is showing

APC(Hydraulic pump control)

Or electric parts error is occurring.

Please go to **APC** pages